



# Rear Rudder Assembly

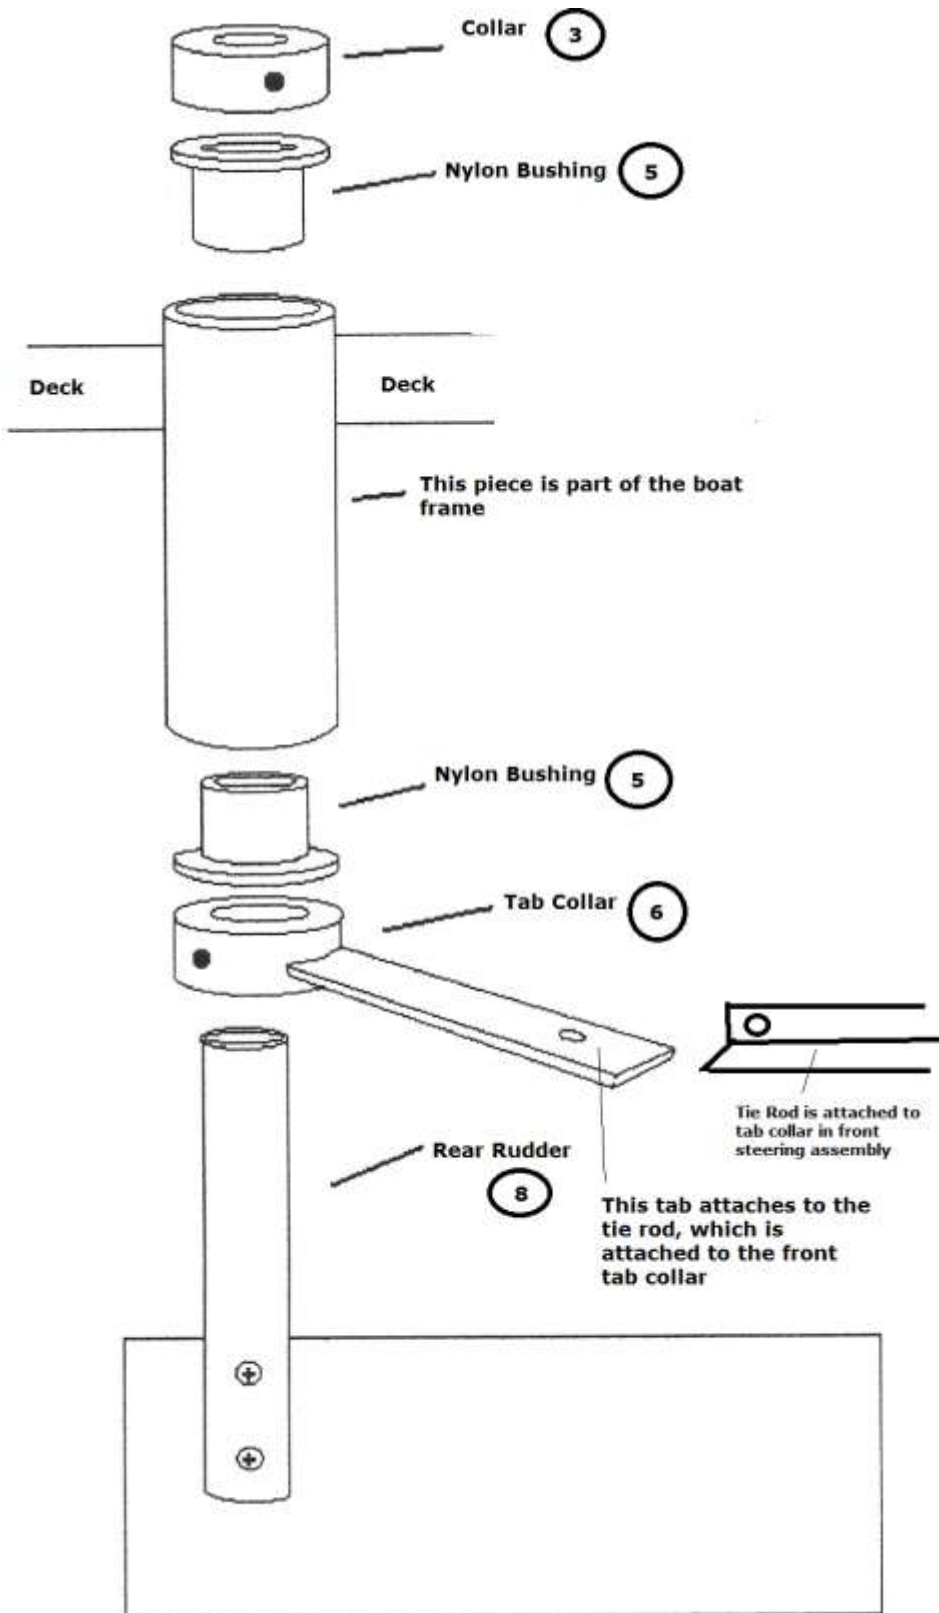

1. Slide tab collar (6) and nylon bushing (5) over rear rudder shaft (8) until it touches the plastic rudder piece.
2. Insert rudder assembly through opening in deck.
3. Slide nylon bushing (5) and collar over shaft and tighten set screw.
4. Reattach tab collar (6) to tie rod.
5. Align rudder so it is straight back (steering handle should be straight also), and tighten set screw in tab collar.

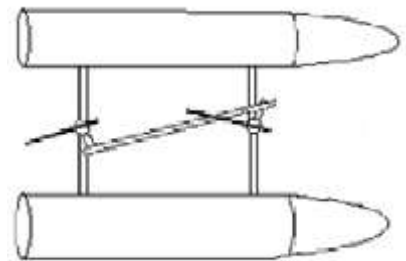

Front and rear rudders should point in opposite directions when the steering handle is moved from side to side.

